




More information on the website
radwag.com/en/info,w1,SLE

H315.4.3000.C10 Platform Scale

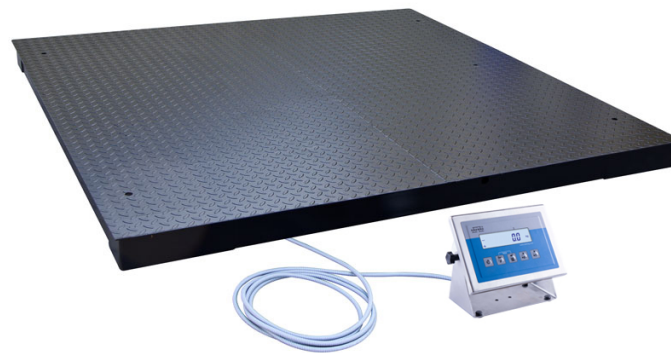

The drawings, photos and graphics used are for illustrative purposes only.

Functions

 Plus/Minus Control

 Percent Weighing

 Totalizing

 Parts counting

 Internal battery

 Peak hold

 Newton unit measurement

 Animal weighing

Datasheet

| Metrological parameters | |
|--|---------------|
| Maximum capacity [Max] | 3000 kg |
| Minimum load | 20 kg |
| Readability [d] | 1 kg |
| Tare range | -3000 kg |
| Max readability for non-verified scale | 200 g |
| OIML Class | III |
| Physical parameters | |
| Display | LCD (backlit) |
| Weighing pan dimensions | 1500×2000 mm |

| Physical parameters | |
|-----------------------------|---|
| Weighing platform height | 120 ±10 mm |
| Packaging dimensions | 2100×1600×550 mm |
| Scale mass with indicator | 230 kg |
| Cable length | 3 m |
| Construction | |
| Protection class | IP 65 construction, IP 68 (1h max)/69 indicator |
| Communication interface | |
| Communication interface | RS232, USB |
| Optional interfaces | RS232 or RS485 or 4IN/4OUT or Ethernet or analog output 4-20 mA |
| Electrical parameters | |
| Power supply | 100 – 240 V AC 50/60 Hz |
| Optional power supply | internal rechargeable battery |
| Operation time on batteries | max 7h |
| Environmental conditions | |
| Operating temperature | -10 ÷ +40 °C |
| Relative humidity | 10% ÷ 85% RH no condensation |



Extra payment for verification



Accessories

RS 232 cables (scale - printer)
 Displays
 RS 232 cables (scale - Ethernet)
 RS 232, RS 485 cables
 Ramps
 RS 232 – Ethernet Converter
 USB adapter
 Receipt Printer

AP2-1 Current Loop Unit
 USB cable (scale - printer)
 RS 232, RS 485 cables
 Stands, wall mounting kits and mounting brackets
 RS 232 – USB Converter
 RS 232 cables (scale - printer)
 RS 232 – RS 485 Converter
 Frame for embedded scales

Software

- RAD Key [WX-010-0005]
- R-Lab [WX-010-0080]

- R-Panel [WX-010-0187]
- Scale Editor 2.1 [WX-010-0173]