



radwag.com

Scan the QR code to view additional scientific material that may be of interest to you.
There you will find more useful information in an accessible format!

User manual

IMMU-1161-01-04-23-EN

21 CFR Part 11 Compliance module

5Y Balances
CY10 Balances

OCTOBER 2023

Contents

1. GENERAL INFORMATION.....	4
2. ACTIVATION OF THE MODULE	4
3. ADMINISTRATOR PANEL	5
3.1. Password settings.....	5
3.2. Operator accounts settings	6
3.3. Permissions management.....	8
3.4. Audit trail.....	11
3.5. E-signature	13
3.6. Backup	15
4. CREATING A DOCUMENT AND SIGNING IT VIA E-SIGNATURE	18
5. SIGNING A DOCUMENT FROM DATABASE LEVEL.....	23
5.1. Saved document printout	25

1. GENERAL INFORMATION

Additional 21 CFR part 11 compliance module

All 5Y-series balances comply with the 21 CFR part 11 regulation and EU GMP part 4 regulation, annex 11. This means that they hold an electronic signature and a series of functions that protect and monitor operations of particular operators.

The data are fully protected through the following:

 
 
- advanced password settings
- correct login check
- assignment of unique permission levels to operators
- automatic logout
- electronic signature, e.g. for a series of measurements
- saving signed documents in the database
- data management access settings
- data backup
- saving modifications in the Audit Trail file

2. ACTIVATION OF THE MODULE

The 21 CFR compliance module can be activated through a special code generated in the RADWAG's head office on the basis of a 12-digit license number that can be read in the balance menu: **Setup / System info / License ID**.

To enable this option, send the license number to RADWAG for generation of an unlocking code. The code will be returned to the client as a file. Save the file in the main directory on the Pendrive (external storage device) and then put the Pendrive into the USB port on the side of the balance, and activate the option in the menu: **Setup / Miscellaneous / Extension modules / Compliance with FDA 21 CFR / EU GMP Volume 4**. The balance software will check if the unlocking code is correct and the module will be activated. A relevant message will be displayed on the balance screen and the parameter value will turn into **Enabled** to signal the above-stated operation.

← Extension modules

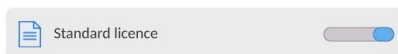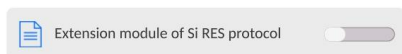

From now on, the balance software assures full functionality of the 21 CFR part 11 compliance module.

New settings related to operation of the module will show up in the **<Administrator panel>** parameters group in the balance menu. The operator can set all available parameters in accordance with 21 CFR part 11 requirements.

3. ADMINISTRATOR PANEL

 
In this menu group, you can declare the scope of actions that the operator with a specific permission level can take, password protection level and the unlogged operator's permission.

NOTE: Only the operator with the <Administrator> permission level can modify this menu.

← Administrator panel

 Audit trail

 Operator accounts settings

 Backups

 Password settings

 Permissions management

3.1.Password settings

The menu group that allows you to specify the password complexity for balance operators.

← Password settings

 Minimum password characters quantity 0

 Lower case and upper case letters required ☒

 Digits required ☒





 Special characters required ☒

 Password validity period 0 Days

Minimum password characters quantity	Specify the minimum number of characters in the operator's password. For '0" value, you can set any number of characters.
Lower- and upper- case letters required	Specify requirements regarding characters in operators' passwords.
Digits required	
Special characters required	
Password validity period	Specify the period of time, in days, after which you need to change the password. For '0' value, the balance software does not require you to change the password.


3.2. Operator accounts settings

 ← Operator accounts settings

 Anonymous operator Operator	 Auto logout None
 Failed login attempts quantity causing account lock 0	 Hide mass when operator unlogged <input type="checkbox"/>

Unlogged operator's permission

The administrator can assign permission levels to the balance operator who has failed to log in (the so-called anonymous operator).

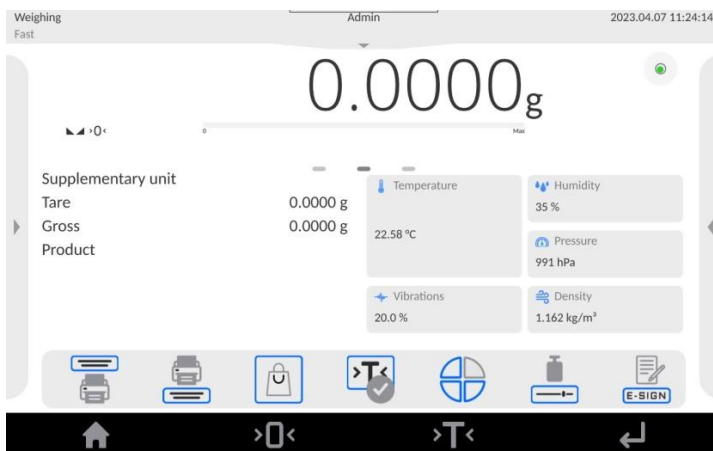

Procedure:

Enter the <Operator accounts settings> parameters group, select <Unlogged operator permission levels> and then choose one of the following variants: Guest, Operator, Advanced Operator, Administrator.

Note: If you set <Guest>, the unlogged operator will not be authorised to change any software settings.

Automatic logout

This option allows you to activate the automatic logout after a specific period of time, given in minutes, if the balance is not used.

By default this option (<None>) is inactive in the balance.

Procedure:

Enter the <Operator accounts settings> parameters group, select <Automatic logout> and then choose one of the following variants: none/3 minutes/5 minutes/15 minutes/30 minutes/60 minutes.

Number of account-blocking login errors

The option allows you to set the number of unsuccessful logging attempts taken by the operator. When the limit is exceeded, the access to the account will be blocked.

By default this option is disabled in the balance (<0> setting).

Procedure:

Go to the <Operator accounts settings> parameters group, select <Number of account-blocking login errors> and then enter the desired value.


Note: when login errors occur (when the operator enters a wrong password) in the amount specified in this parameter, the specific operator's account will be blocked. This being the case, the administrator must intervene in order to unblock the account.

Hide mass when operator unlogged

This option allows you to disable the mass display if the operator is not logged in. By default this option is inactive in the balance (<None> setting).





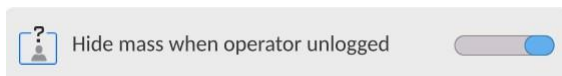






Procedure:

 Go to <Hide mass when operator unlogged> and then switch the option into active.



3.3.Permissions management

← Permissions management

 FDA 21 CFR / EU GMP Volume 4		 Database	
 Date and time	Administrator	 Printouts	Administrator
 Header printout	Operator	 Footer printout	Operator
 Printout / Enter key	Operator	 Videos	Administrator
 Working mode change	Operator	 Information	Operator
 Zero statistics manually	Operator		

Note: if you switch the value of permission into **<Guest>** for particular parameters, the access to settings will be open (no need to log in).

For each option, you can assign the permission level for edition or preview. Available settings:

← Date and time

Guest

 
 











Operator

Advanced operator

Administrator

Databases

← Database

 Databases preview	Operator	 Products	Administrator
 Customers	Administrator	 Formulations	Administrator
 Packaging	Administrator	 Warehouses	Administrator
 Pipettes	Administrator	 Series	Advanced operator
 Adjustment weights	Administrator	 Printouts / Labels	Administrator
 Universal variables	Operator	 Delete weighing records and reports	Advanced operator
 Delete databases	Administrator		

Default settings of the balance allow the operator logged as **Administrator** to make changes to particular databases. Depending on requirements, these permissions can be modified.

Similarly, you can change permissions for edition of other options available in this menu.

Default permission settings for particular options:

Data to be edited:		Default permission:
FDA 21 CFR / EU GMP Volume 4		
	E-signature	Operator
	E-signature: approval	Advanced operator
	E-signature: authorisation	Administrator
	Signed documents: Preview	Administrator
	Audit trail export	Administrator
	Delete archived audit trail data	Administrator
Databases		
	Database preview	Operator
	Products	Administrator
	Clients	Administrator
	Formulations	Administrator
	Packaging	Administrator
	Warehouses	Administrator
	Pipettes	Administrator
	Series	Advanced operator
	Adjustment weights	Administrator
	Printouts / Labels	Administrator
	Universal variables	Operator
	Delete weighing records and reports	Advanced operator
	Delete databases	Administrator
Date and time		Administrator
Printouts		Administrator
Header printout		Operator
Footer printout		Operator
Printout / enter key		Operator
Working mode change		Operator
Information		Operator
Manual statistics reset		Operator

3.4. Audit trail

The balance software saves all operations that are required by 21 CFR part 11 in the balance memory. It applies to the operations, for example to adding, editing or deleting operators, that have been performed in the balance ever since it was activated.


The balance memory is limited and thus you need to remember to archive audit trail file systematically in accordance with provisions of the quality management system in force in the specific plant.

← Audit trail




Before activating the function, put the Pendrive into the USB port and enable the function.

← Audit trail export

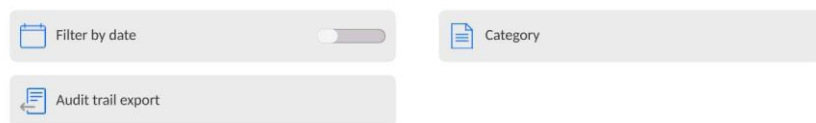


← Category

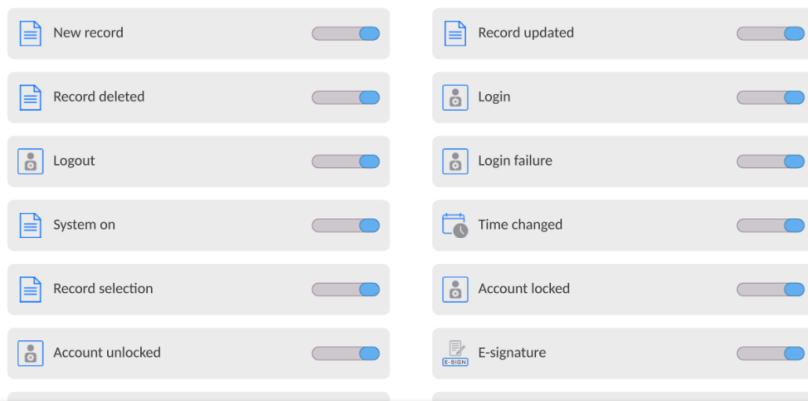

After enabling the function, a new information box will be displayed. It will show a process progress.

When it is completed, the box will be closed and the file „*AuditTrail_123123_2023_04_07 11_27_28.txt*“ with data with ‘*readout only*’ attribute will be saved on the pendrive.

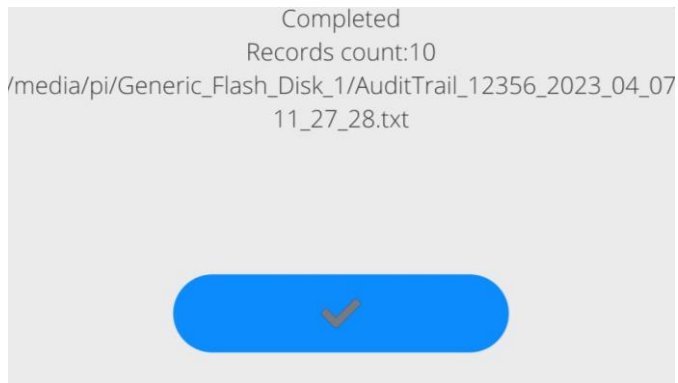

The example of view and content of the *AuditTrail...file*:

Date and time	Database name	Database name	Category	Category	Record id	Record name	Column name	Column name	Previo
2023-04-03 09:48:55	Audit trail	Szczelka audytu	Record deleted	Usunięto rekord					2023-04-04 00:00:00
2023-04-03 09:58:18		System on	Start systemu						
2023-04-03 09:58:19	Profiles	Profile Record selection	Wybór rekordu		1073741825	Fast			
2023-04-03 09:58:31	Operators	Użytkownicy	Login	Logowanie	1	Admin		1	Admin
2023-04-03 09:58:52	Parameters	Parametry	Record updated	Zmieniono rekord			Global/Compliance with 21 CFR	Global	Global
2023-04-03 12:20:18	Parameters	Parametry	Record updated	Zmieniono rekord			Global/Compliance with 21 CFR	Global	Global
2023-04-03 12:36:22	Parameters	Parametry	Record updated	Zmieniono rekord			Global/Compliance with 21 CFR	Global	Global
2023-04-07 11:22:09	Parameters	Parametry	Record updated	Zmieniono rekord			Global/Compliance with 21 CFR	Global	Global
2023-04-07 11:22:13	Operators	Użytkownicy	Logout	Wylogowanie		Supervisor			
2023-04-07 11:22:15	Operators	Użytkownicy	Login	Logowanie	1	Admin		1	Admin

Once the data have been archived, you can delete the audit trail so that you can make space for further data.

The following events are saved in the *AuditTrail... file*:

Scope of data	Scope of logged changes
Operators	Adding, deleting, editing and logging, logging out (also automatic), wrong login, account blocking, account unblocking.
Clients	Adding, deleting, editing.
Products	Adding, deleting, editing.
Profiles	Adding, deleting, editing and selecting specific profile.
Packaging	Adding, deleting, editing.
Warehouses	Adding, deleting, editing.
System start	
Date and time change	
Adjustment	Every adjustment completion event.
Database import	
Backup	Execution and restoration of backup.

3.5. E-signature

The balance software can save data on completed weighing in the balance memory. These data can take a form of documents and can be signed via the so- called e-signature.

The balance memory is limited and allows saving up to 16 GB of data with documents.

For this reason please remember to archive the signed documents base systematically.

← Reports



E-signed documents



Weighing records



Formulations report



Density reports



Controls reports



SQC statistics



Pipette calibration
reports



Ambient conditions



Manage reports


← E-signed documents



2023.04.07 11:39:08


1

Before activating the function, put the Pendrive into the USB port and enable

the signed document export function by using the  key.

When the function is active, a new information box will be displayed. In the box, you will see a process progress.

When it is completed, the box will be closed and the „*E-signed documents_123123.tdb*“ file with data will be saved on the Pendrive.

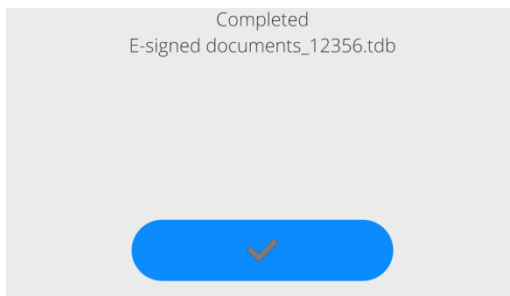

Working mode	Weighing

Date	2023.04.07
Time	11:36:48
Operator	Admin
Product	
Net	10.0018 g
Date	2023.04.07
Time	11:36:57
Operator	Admin
Product	

----- E-sign data -----	
Date and time	2023.04.07 11:39:08
Operator	Admin
Name and Surname	
Action	Signed

----- E-sign data -----	
Date and time	2023.04.07 11:42:58
Operator	Admin
Name and Surname	
Action	Confirmed

Once the data have been archived, you can delete signed documents in order to assure space for further data.

3.6. Backup


The balance software allows you to make a backup of settings and data saved in the balance memory, and in case of emergency, for example balance failure and a need to replace it, to import saved settings and data to a new balance. To make the data restoration procedure possible, a new balance must be identical in terms of the software and metrological settings to the previous balance.

The authorised operator can make a backup on the Pendrive at any time.


← Backups




Before activating the function, put the Pendrive into the USB port and enable the function.

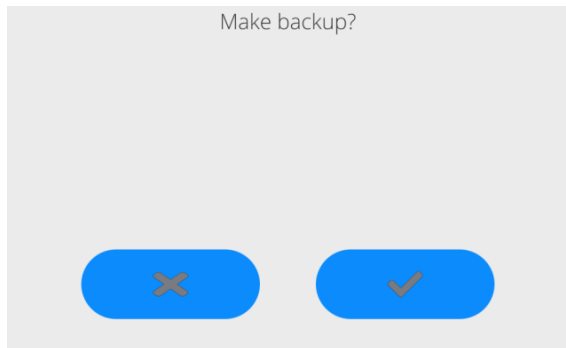

After activating the function, the backup making procedure will be initiated. Throughout the procedure, the balance settings and data saved in the balance memory will be saved in a relevant file.

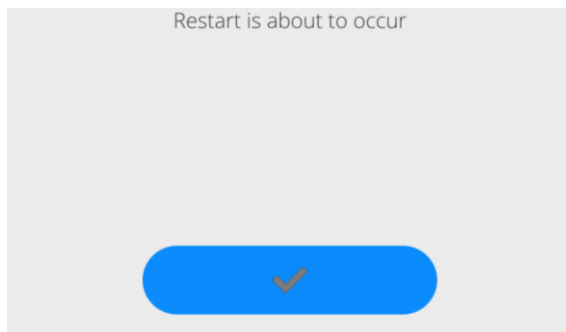

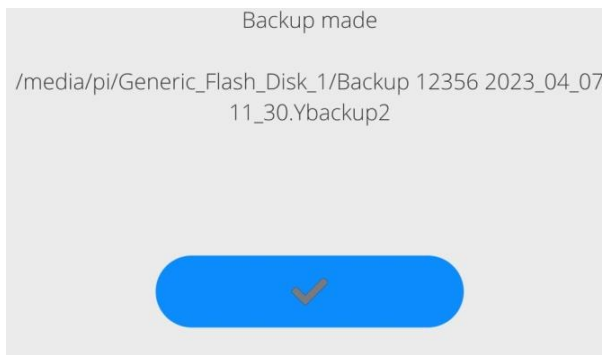

When it is completed, the „*Backup 12356 2023_04_07 11_30.Ybackup2*“ file (backup file with balance settings and data) will be saved on the Pendrive. To restore the data, plug the Pendrive with files with backup in and activate the <Restore backup balance data> variant.

← Generic_Flash_Disk_1



System Volume Information



Backup 1 2023_03_31 10_57.Ybackup2



Backup 12356 2023_04_07 11_30.Ybackup2

Restore backup balance data?


/media/pi/Generic_Flash_Disk_1/Backup 12356 2023_04_07
11_30.Ybackup2



The balance software will check if the data are correct and if they can be copied into the memory. If the procedure is found feasible, the backup restoration procedure will be initiated automatically and the operator will be notified of the progress through relevant messages in the home screen. Once the procedure has been completed, the information on restoration of data will be saved in the Audit Trail file.


4. CREATING A DOCUMENT AND SIGNING IT VIA E-SIGNATURE

Any operations in the balance must be performed by the operator after he has logged in. He will be allowed to perform operations attributable to his permission level (permission level for the operation is determined by the administrator).

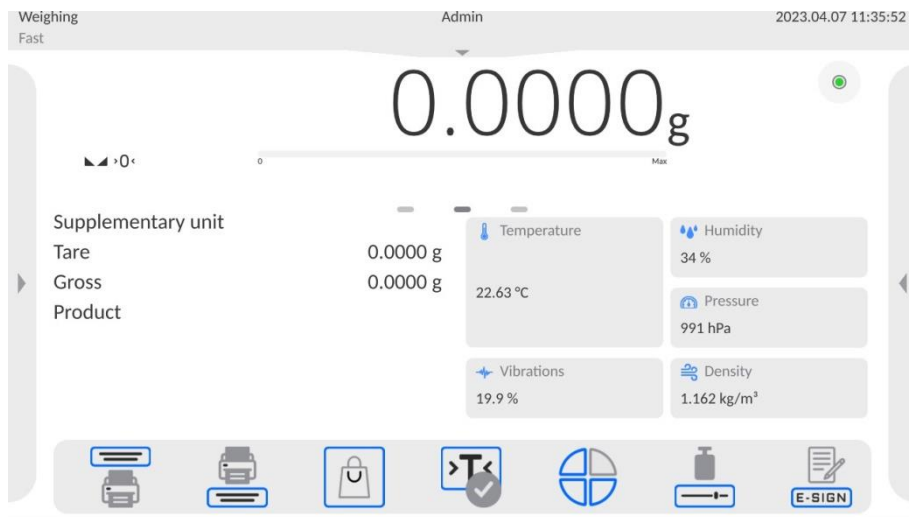


To start the document, click  and the communication box will be displayed. Activate <Start new document>.

 
← E-signature

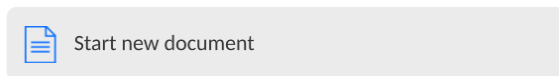


The procedure of creating a new document will be initiated automatically and the home screen of the software will be displayed again.

From now on, every approved measurement (PRINT key on the balance screen) will be saved in the open document.

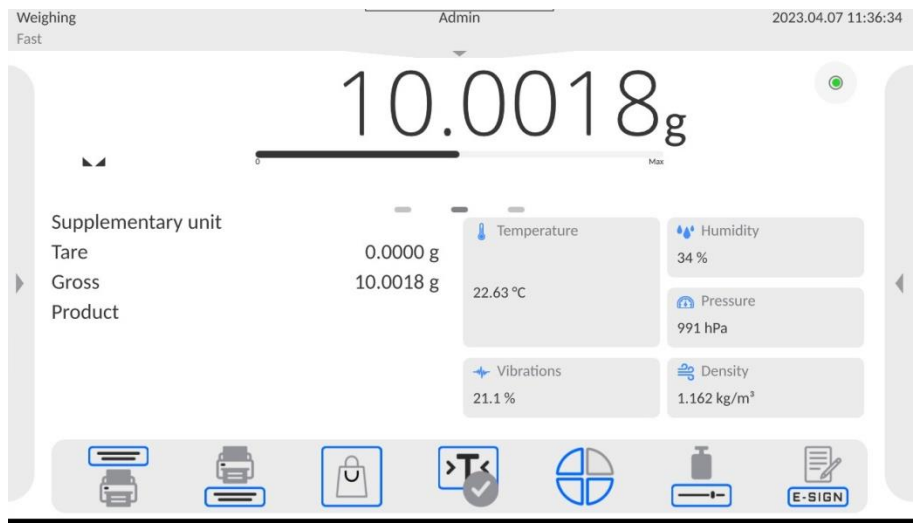

To preview the content of the document, press  and select <Document preview>.

← E-signature

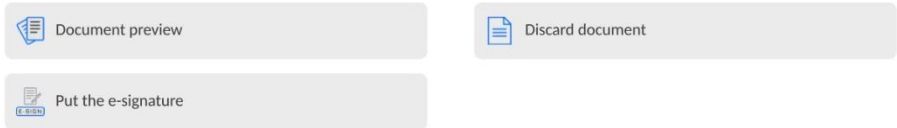


Once you have selected it, the home screen will show the content of data saved in the document.




← Document preview





Date	2023.04.07
Time	11:36:48
Operator	Admin
Product	
Net	10.0018 g
Date	2023.04.07
Time	11:36:57
Operator	Admin



q	w	e	r	t	y	u	i	o	p	⌫
a	s	d	f	g	h	j	k	l	↵	
⌕	z	x	c	v	b	n	m	,	.	⌕
↩	&123	English					🌐	🔍		

   
At any time you can abort saving data in the document. To do so, press  and select  Discard document . After selecting it, you will see a message with the question: <Abandon document>?. If you confirm the operation with , the document will be finished and will not be saved in the database.

To save the document in the database, press  and select  Put the e-signature . Next a document preview box will be displayed.


← Put the e-signature




Date	2023.04.07
Time	11:36:48
Operator	Admin
Product	
Net	10.0018 g
Date	2023.04.07
Time	11:36:57
Operator	Admin









q	w	e	r	t	y	u	i	o	p	⌫
a	s	d	f	g	h	j	k	l	↵	
⌕	z	x	c	v	b	n	m	,	.	⌕
↩	&123	English					🌐	🔍		

To continue the document signing procedure, press . You will see a box with a keyboard.


← Enter password











q	w	e	r	t	y	u	i	o	p	
a	s	d	f	g	h	j	k	l		
	z	x	c	v	b	n	m	,	.	
		&123	English							

Enter a correct password of the logged operator and press to confirm it. You will see another box  with a keyboard. There, the operator can add a comment on completed measurements.

 ← Note




q	w	e	r	t	y	u	i	o	p	
a	s	d	f	g	h	j	k	l		
	z	x	c	v	b	n	m	,	.	
	&123	English								

 
 
After entering the comment and saving it in the document through  , the following message will be displayed:




The operator can do either of the following:


1. Keep on working with this document and add further measurements by clicking  . This being the case, the message box will be closed and another window will pop up:

← E-signature

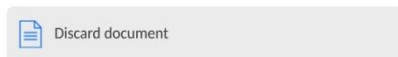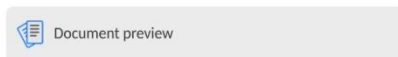

2. Stop saving measurements by clicking  . This being the case, the document will be closed and the box will be displayed:

 ← E-signature

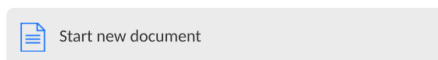

You can start another document or go back to the home screen of the software.

The balance memory is limited and allows saving up to 160 GB of data with documents. For this reason please remember to archive the signed documents base systematically.

The balance software checks the free space for documents on an ongoing basis. If it determines that 90% of memory is taken, the message that reminds the operator to archive data will be displayed.

After this message has been showed, the operator can keep on saving documents.

If the data are still saved and the software detects full memory, another message on lack of space will be showed.

This being the case, it will not be possible to save further measurements. Finish the document you have started by signing it. Archive data afterwards.

The documents are related to the current working mode of the balance. The software allows creating documents in any working mode at a time. This means that you can have several active documents in various working modes.

5. SIGNING A DOCUMENT FROM DATABASE LEVEL

You can only sign documents from the working mode level. Signing and finishing the document results in saving it in the database in the <Signed documents> parameters group.

To sign, approve or authorise the document again, enter the reports base and go to the <Signed documents> base.

← Reports



E-signed documents



Weighing records



Formulations report



Density reports



Controls reports



SQC statistics



Pipette calibration
reports



Ambient conditions



Manage reports

The box will show saved documents and each of them will be assigned a number specifying the number of e-signatures for a specific document.

← E-signed documents



2023.04.07 11:39:08

1

To add another e-signature, click the document field to display details:

Edit record

Working mode Weighing

Report

E-signatures? 1

Put the e-signature

Select the <Put the e-signature> variant. The document preview box will be displayed:

Put the e-signature

Date	2023.04.07
Time	11:36:48
Operator	Admin
Product	
Net	10.0018 g
Date	2023.04.07
Time	11:36:57
Operator	Admin

q w e r t y u i o p

a s d f g h j k l

z x c v b n m , .

&123 English

Press to display the box with available operations:

Action

Signed

Confirmed

Authorised

Select one of the options, e.g. <Confirmed>, and following the description above on signing the document, sign the document via the password and add, if necessary, a comment. After confirming it, the box with details will be displayed, and the number of signatures in <E-signature> field will rise by one.

← Edit record




Working mode	Weighing
E-signatures?	2

Report
Put the e-signature

You can add up to 10 e-signatures to a specific document.

5.1. Saved document printout

To print the document out using a connected printer, click  in the <Details> box.

← Edit record



Working mode	Weighing
E-signatures?	2

Report
Put the e-signature

The document with data on e-signatures in this document will be automatically printed out.

```
Working mode                               Weighing
-----
Date                                     2023.04.07
Time                                    11:36:48
Operator                                Admin
Product
Net                                     10.0018 g
Date                                     2023.04.07
Time                                    11:36:57
Operator                                Admin
Product
-----

----- E-sign data -----
Date and time                           2023.04.07 11:39:08
Operator                                Admin
Name and Surname
Action                                  Signed
-----

----- E-sign data -----
Date and time                           2023.04.07 11:42:58
Operator                                Admin
Name and Surname
Action                                  Confirmed
-----
```

