



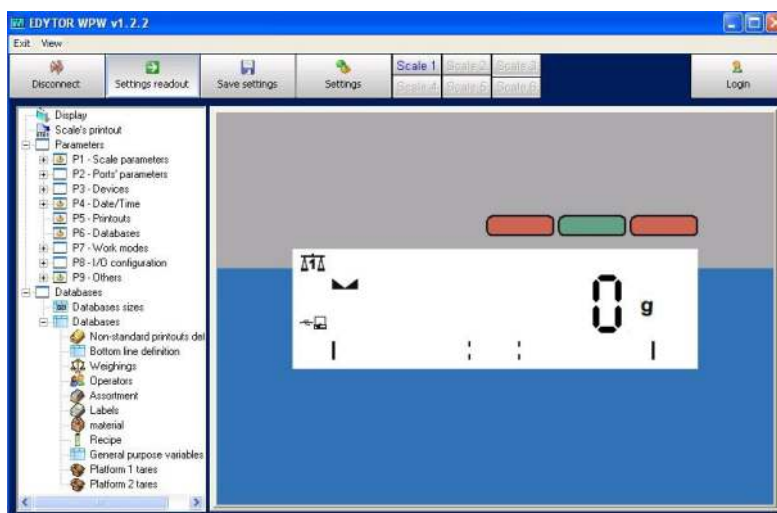

Product description:

WPW Editor is a freeware designed by RADWAG for changing the parameter settings of indicator PUE C41H.

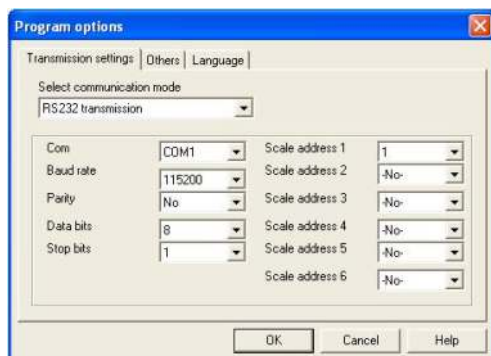

Designed for scales:

- All scales series WPW offered by RADWAG

Functions:

- Definable access levels for each user;
- Editing and changing all user parameters from computer level (filters, date / time, display backlight, INPUT/OUTPUT configuration, setting parameters of RS 232, RS485, ETHERNET, etc.);
- Export, import and database editing;
- Printouts from accomplished measurement series saved in a file;
- User definable data displayed in bottom display line;
- Defining non-standard printouts.

Minimal hardware requirements:

- Processor 1 Ghz or faster (2GHz for Windows Vista/7)
- Minimum of 100 MB HDD free space
- RAM 1 GB (recommended 2 GB for Windows Vista/7)
- Windows OS 2000/XP/2003/Vista/7
- Monitor operating with minimum resolution 1024x768 pixels
- Default size of system fonts (96 dpi)

Available language versions: Polish, German, English, French.

* NOTE! RADWAG does not sell boxed version of the software. Boxes presented on our Web-site are of virtual characteristic only, and they are not accessible with purchased software.