 
 


# Scales Editor Software

 
The Scales Editor software enables change of parameters in PUE C/31 indicator.

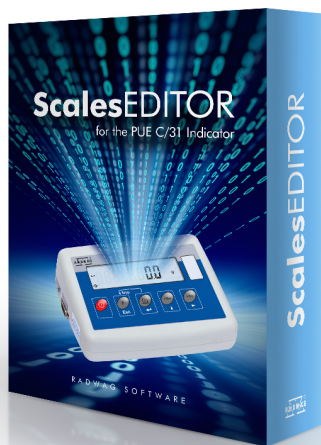


Scales Editor

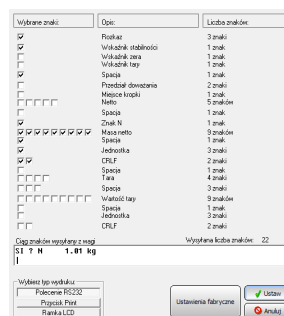

Printout settings in Scales Editor

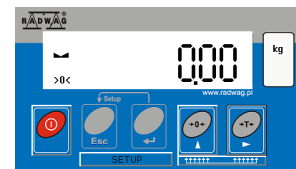

Weighing result window in Scales Editor software

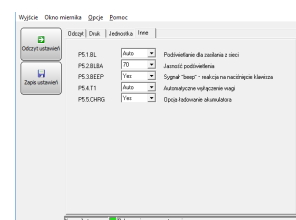

Parameters settings in Scales Editor

## Features

### Scales Editor Functions

- Mass readout;
- Taring, zeroing, giving tare value;
- Scale parameters processing;
- Connection established via RS232 port;
- Language versions: Polish, English and German;
- Compatibility with Microsoft Windows OS.

### Intended Use

The software is intended to enable operation of WPT scales and PUE C/31 indicators. It allows uncomplicated and swift parameters modification. The software facilitates mass readout and scale operation using computer.

## Compatible with

### Scales

- WPT industrial scales

### Indicators

- PUE C/31 indicator

## General Requirements

### Minimum requirements for server

- Computer operating in Windows environment: Windows 10, Windows 8 and 8.1, Windows 7 (excluding Starter version);
- Hardware recommendations:
  - 2 GHz single-core processor or faster,
  - minimum 3 GB operating memory
  - at least 100 MB of free space on a hard drive,
  - 1280x1024 computer monitor.