



More information on the website
radwag.com/en/info,w1,G9I



H315.4I.2000.H3 Livestock Scale
H315.4I.2000.H2 Livestock Scale



H315.4I.2000.H1 Livestock Scale

The drawings, photos and graphics used are for illustrative purposes only.

Functions



Plus/Minus Control



Percent Weighing



Totalizing



Parts counting



Internal battery



Peak hold



Newton unit
measurement



Animal weighing

Datasheet

	H315.4I.2000.H3 Livestock Scale	H315.4I.2000.H1 Livestock Scale	H315.4I.2000.H2 Livestock Scale
Metrological parameters			
Maximum capacity [Max]	2000 kg	2000 kg	2000 kg
Minimum load	20 kg	20 kg	20 kg
Readability [d]	1 kg	1 kg	1 kg
Tare range	-2000 kg	-2000 kg	-2000 kg
OIML Class	III	III	III
Physical parameters			
Display	LCD (backlit)	LCD (backlit)	LCD (backlit)
Weighing pan dimensions	1×2,5 m	1×2 m	1×2 m
Scale mass with indicator		290 kg	
Barriers height	1,8 m	1,1 m	1,8 m
Construction			
Protection class	IP 68 construction, IP 68 (1h max)/69 indicator	IP 68 construction, IP 68 (1h max)/69 indicator	IP 68 construction, IP 68 (1h max)/69 indicator
Communication interface			
Communication interface	RS232, USB	RS232, USB	RS232, USB
Optional interfaces	RS232 or RS485 or 4IN/4OUT or Ethernet or analog output 4-20 mA	RS232 or RS485 or 4IN/4OUT or Ethernet or analog output 4-20 mA	RS232 or RS485 or 4IN/4OUT or Ethernet or analog output 4-20 mA
Electrical parameters			
Power supply	100 – 240 V AC 50/60 Hz	100 – 240 V AC 50/60 Hz	100 – 240 V AC 50/60 Hz
Optional power supply	internal rechargeable battery	internal rechargeable battery	internal rechargeable battery
Operation time on batteries	max 7h	max 7h	max 7h
Environmental conditions			
Operating temperature	-10 ÷ +40 °C	-10 ÷ +40 °C	-10 ÷ +40 °C
Relative humidity	10% ÷ 85% RH no condensation	10% ÷ 85% RH no condensation	10% ÷ 85% RH no condensation



Extra payment for verification



Accessories

RS 232 cables (scale - printer)
Displays
RS 232 cables (scale - Ethernet)
RS 232, RS 485 cables
RS 232 – Ethernet Converter
USB adapter

Receipt Printer
USB cable (scale - printer)
Stands, wall mounting kits and mounting brackets
RS 232 – USB Converter
RS 232, RS 485 cables



Software

RAD-KEY
R-LAB

R Panel
Scales Editor 2.1

Device dimensions

H315.4I.2000.H3 Livestock Scale, H315.4I.2000.H1 Livestock Scale, H315.4I.2000.H2 Livestock Scale

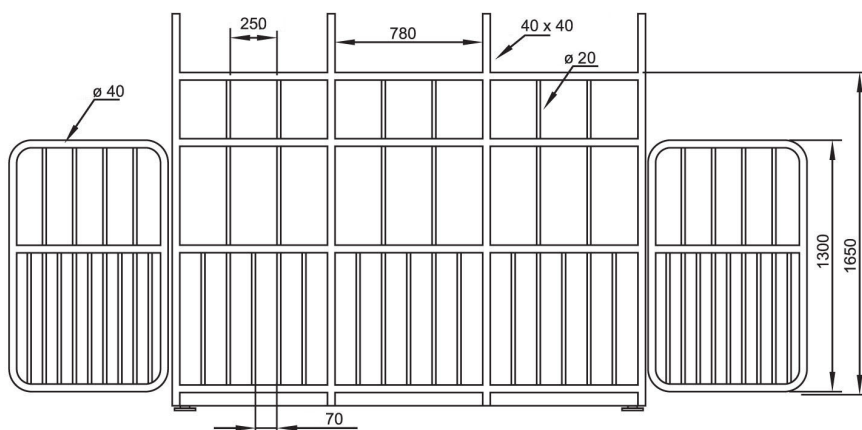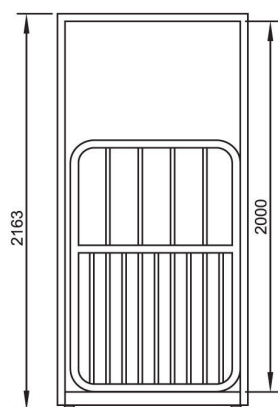

Option of door customization
(opening direction and type due
to different combinations of hinges
assembling and various door models)

