ZD421TDesktop Printer





Quick Start Guide



zebra.com/setup

Scan the code to download and install Zebra Setup Utilities.






Slide the release latches to the front to unlock the cover.



Open the printer and remove the packing.

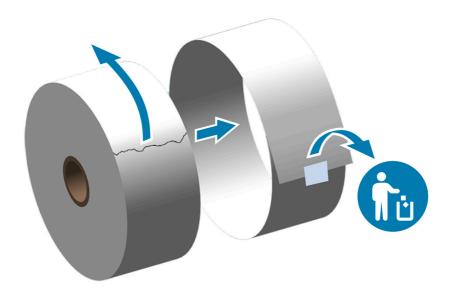

Unroll and discard the outer layer of the media roll.



Spread the roll holders open and place the roll into the printer.



Verify the roll spins easily on the holder.



Pull the end of the roll past the front edge of the printer.



Press the media under the guides.




Align the sensor to the center of the roll for regular labels.



Align the sensor to the edge of the roll for marked labels.



Push the right side of the spool onto the spring-loaded spindle.

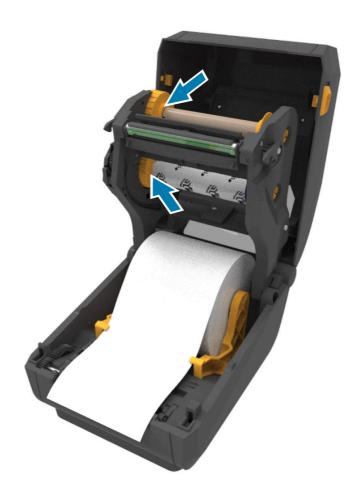

Place the left side of the spool onto the spindle aligning it with the notches.




Pull the supply ribbon leader up and over the printhead and attach it to the take-up spool.



Turn the ribbon take-up wheel to remove the slack and advance the ribbon.



Push down on the front edge of the printer until it locks.

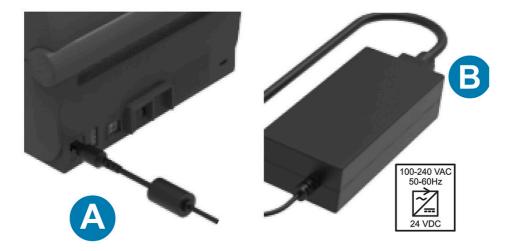

- A. Plug the power supply into the printer.
- B. Plug the power cable into the power supply.



- C. Plug the power cord into an appropriate receptacle.
- D. The power supply lights green.



Connect a USB cable to the printer, connect the other end to your computer.



Press the power button.



When the the printer is ready, the printer status light will turn green.

10 Smart Calibration



Press and hold the Pause and Cancel buttons for two seconds to line up the labels.



Press and hold the Feed and Cancel buttons for two seconds to print a configuration report.




When the media runs out, the printer status and media status lights will turn red.

Media Out (continued)




Open the printer and discard the empty roll.

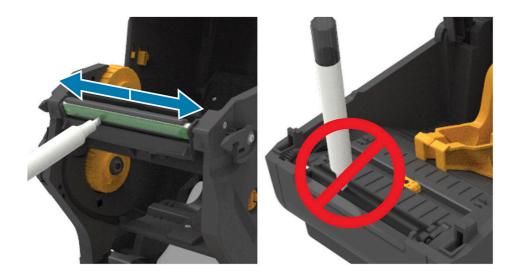

Clean printhead with cleaning pen starting from the middle to sliding to the outside. Do not use a cleaning pen on the platen.



When the ribbon runs out, the printer status and ribbon status lights will turn red.

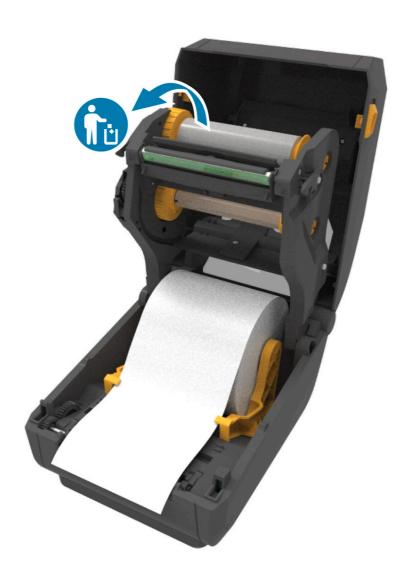

Open the printer and discard the empty spools.



Support and Information



Need to design a label? zebra.com/zebradesigner

View user documentation and how-to videos. zebra.com/zd421t-info





Need to manage your printer? zebra.com/ppme

Contact Zebra about your printer.
zebra.com/contact





Need to secure your printer? zebra.com/printsecure

Learn about genuine Zebra supplies. zebra.com/supplies



Slide the release latches to the front to unlock the cover.

Notes:			

Notes:	





212696-002

Zebra Technologies | 3 Overlook Point | Lincolnshire, IL 60069 USA — zebra.com

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners. © 2020 Zebra Technologies Corp. and/or its affiliates. All rights reserved.

